



72-231 Removal and installation of rear door inside controls

Removal

- 1 Remove door liner (72-101).
- 2 Pull off plastic sheet along top.
- 3 Remove screws on inside controls.

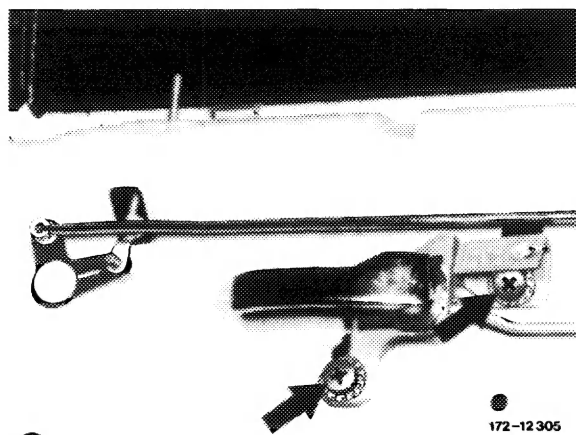

- 4 Turn inside controls around pull rod towards rear and detach pull rod.

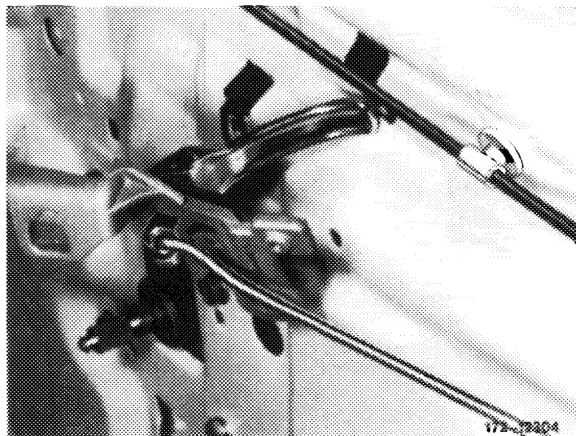

- 5 Detach pull rod at door lock.

Installation

- 6 Install in reverse sequence.
- Note:** Adjust linkage to remove play.

